





avantisports.net

Multi Soccer Goal (GL40)

Assembly Instructions

CONTENTS:

- 1. FRAME POLE (6PCS)
- 2. FRAME POLE (2PCS)
- 3. FRAME POLE (2PCS)
- 4. FRAME POLE (2PCS)
- 5. FRAME POLE (2PCS)
- 6. FRAME POLE (2PCS)
- 7. FRAME POLE (6PCS)
- 8. "L" STYLE CONNECTOR (6PCS)
- 9. "S" STYLE HOOK (25PCS)
- 10. "U" STYLE GROUND PEG (4PCS)
- 11. LARGE GOAL MESH (1PC)
- SMALL GOAL MESH (1PC)

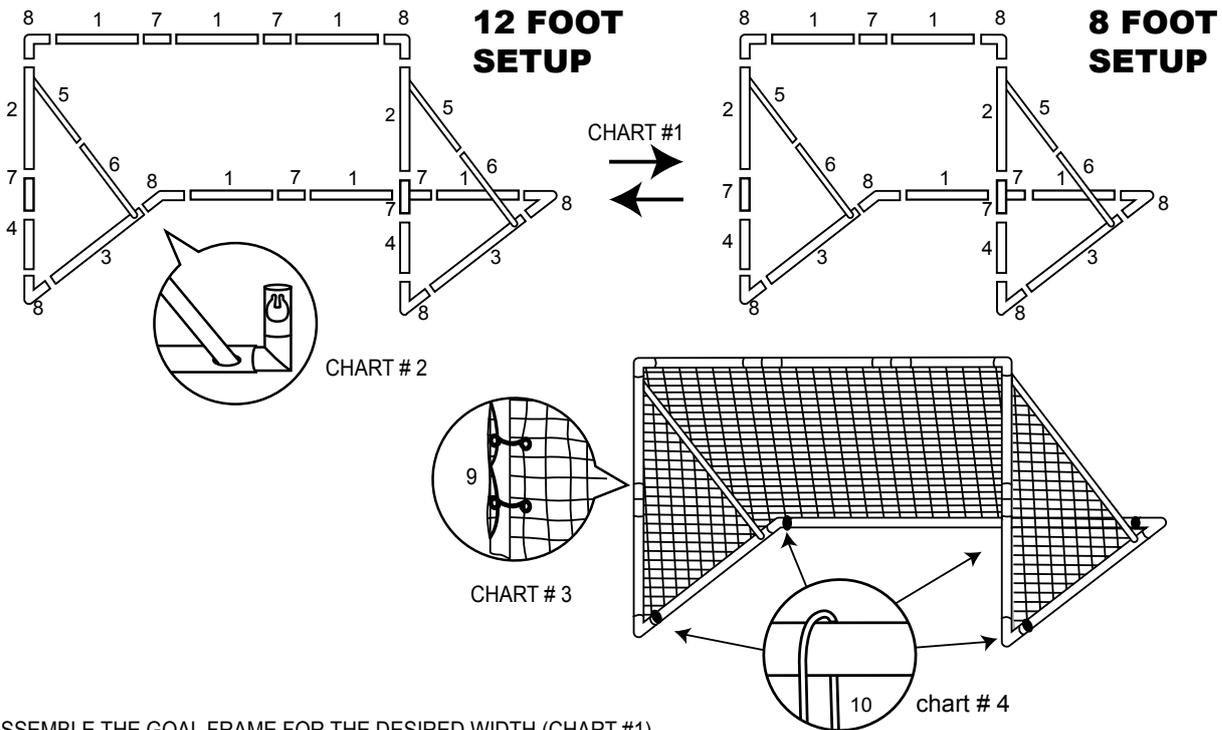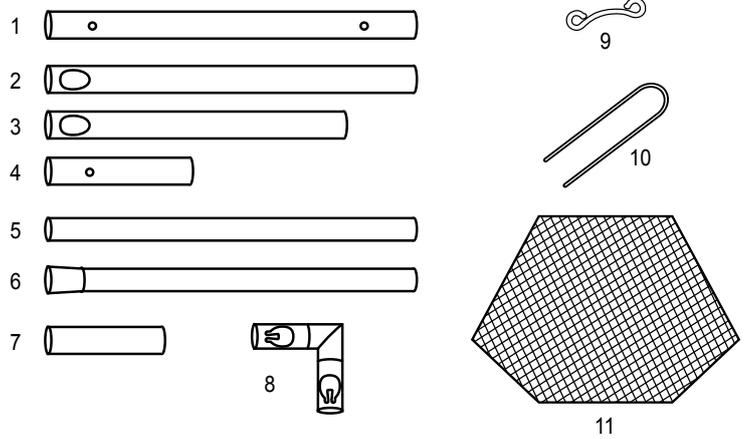

1. ASSEMBLE THE GOAL FRAME FOR THE DESIRED WIDTH (CHART #1).
2. INSERT THE BACK SUPPORT TUBES (CHART #2).
3. FASTEN MESH TO GOAL FRAME WITH NET HOOKS (CHART #3).
4. FIX THE FRAME TO THE GROUND USING U ANCHORS (CHART #4).

CAUTION:

1. CHECK THAT ALL CONTENTS ARE INCLUDED BEFORE ASSEMBLY.
2. ALWAYS ASSEMBLE AND DISASSEMBLE UNDER ADULT SUPERVISION.
3. DO NOT ASSEMBLE OR USE THE GOAL IF ANY PIECES ARE BROKEN OR MISSING.
4. SOCCER GOALS SHOULD BE ANCHORED TO THE GROUND AT ALL TIMES DURING PLAY.
5. NEVER CLIMB OR HANG ON THE SOCCER GOAL.

FOR ASSISTANCE PLEASE CALL 1-877-470-0069

WWW.AVANTISPORTS.NET